


INSTRUCTIONS FOR LOCKING THE PAN ON FIXTURES EQUIPPED WITH THE PAN-LOCKING FEATURE (CM4)

STEP 1:
Pan and tilt the fixture until the aim has been achieved. Lock the tilt in place with a wrench (or the handle if so equipped).

STEP 2:
To lock the pan setting, carefully and completely tighten the UPPER NIPPLE NUT up against the YOKE until the fixture is locked in place.

STEP 3:
Carefully slide the LOWER NIPPLE NUT up the POWER CORD and thread it onto the nipple.

STEP 4:
With a wrench tighten the LOWER NIPPLE NUT against the UPPER NIPPLE NUT. This will prevent them from vibrating loose.

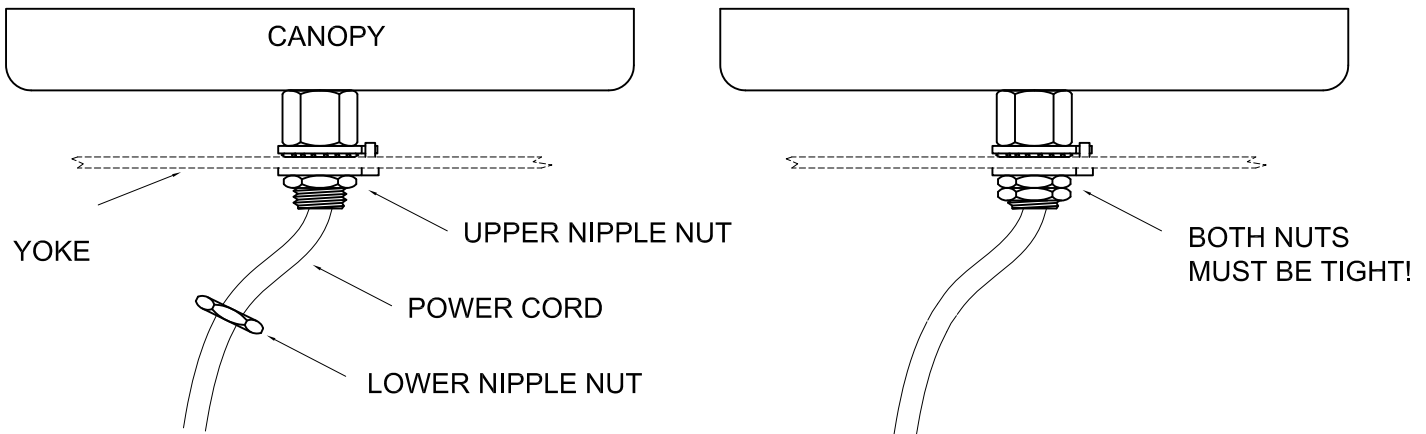

INSTRUCTIONS FOR LOCKING THE PAN ON FIXTURES EQUIPPED WITH THE PAN-LOCKING FEATURE (AD1 & AD12)

STEP 1:
Pan and tilt the fixture until the aim has been achieved. Lock the tilt in place with a wrench (or the handle if so equipped).

STEP 2:
To lock the pan setting, carefully and completely tighten the PANEL NUT up against the YOKE until the fixture is locked in place.

STEP 3:
Carefully slide the NIPPLE NUT up the POWER CORD and thread it onto the nipple.

STEP 4:
With a wrench tighten the NIPPLE NUT against the PANEL NUT. This will prevent the PANEL NUT from vibrating loose.

