

TIMES SQUARE LIGHTING INC.


Times Square Lighting, Inc. 5 Holt Drive, Stony Point, NY 10980
845-947-3034 FAX: 845-947-3047 www.tsight.com

SK-LO4 & SK-LO5 Z-BRACKET INSTALLATION INSTRUCTIONS


STEP 1: Attach Z BRACKET to track using supplied screw as shown*.

STEP 2: Attach upper stem nut to stem, then lower nut. CAUTION: Make certain all lower nut threads are fully engaged.

STEP 3: Slip stem with nuts onto Z Bracket and tighten upper stem nut onto Z Bracket.

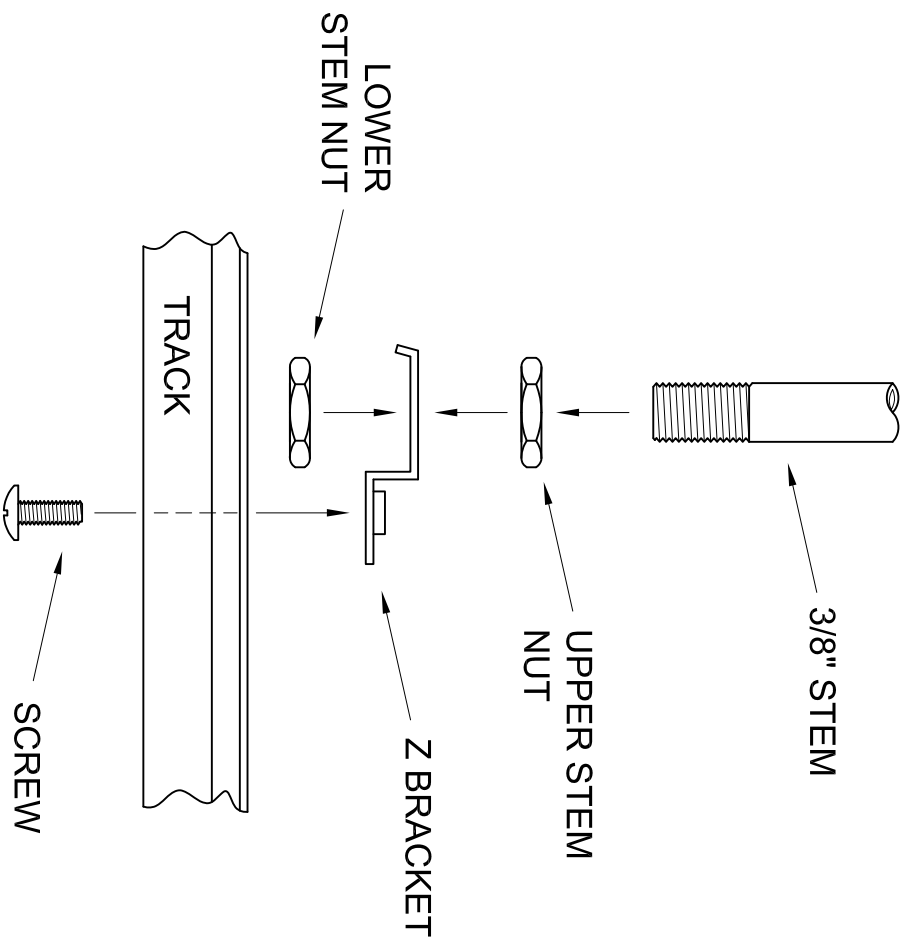

* When installing the screw through the track: (1) use the factory supplied slot, or, (2) drill a hole centered in the base of the track. Use the Z BRACKET as a template, and drill the hole 3/16"-7/32" diameter. Remove burrs after drilling.

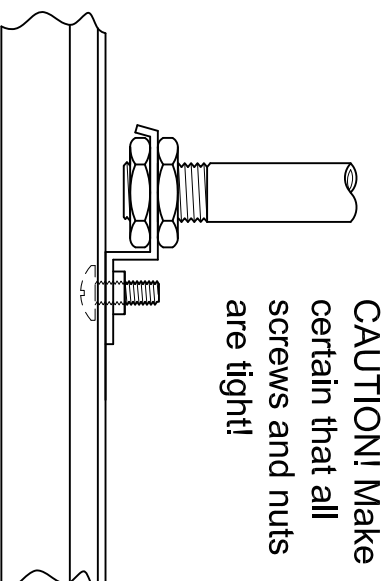

CAUTION! Make certain that all screws and nuts are tight!